

AC7000-A053UX1NA

Features

- Design For Digital TV
- LDMOS Power Amplifier
- Broadband (470 - 860MHz)
- Output DVB-T/H Power 200 Watts
- Ultra-linear Design
- RS232/RS485/USB Interface
- OMT Software
- Squelch Function
- Plug and Play



RF Performance

| | |
|--|------------------------------|
| Operating Frequency Range | 470-860MHz |
| Input/Output Impedance | 50Ω |
| Input Signal Range | -10 to 0dBm |
| P1dB | typical >1200W |
| P_{out} DVB-T | 49dBm to 53dBm step 0.1dB |
| Shoulder(Without Precorrection) | >30dB@200W |
| Output Power Stability | ±0.2dB from 470MHz to 860MHz |
| Squelch Switch ON/OFF Threshold | -10dBm<ON<0dBm |
| Input Return Loss | >18dB |
| Output Return Loss | >22dB |
| Monitoring Signal Intensity | Pout(dBm)-45dB/±0.5dB |

Electrical Requirements

| | |
|--------------------------|------------------------|
| Power Supply | 100-240V AC 50/60Hz |
| Power Consumption | 1270W @ 200W RF Output |


Environmental

| | |
|------------------------------|----------------------------|
| Operating Temperature | 0 to +45°C |
| Storage Temperature | -25 to 70°C |
| Humidity | Up to 90% (Non condensing) |
| Cooling | Fan Cooling |


Mechanical data and Interfaces

| | |
|-----------------------------|---|
| Dimensions | 19" 3HU std 560mm depth |
| Weight | 25Kg |
| Main Power | Rear panel |
| RF Input | N connector rear panel |
| RF Output | 7/16 connector rear panel |
| RF Monitor | SMA connector rear panel |
| RS232 | DB9 connector rear panel |
| RS485 | RJ45 (2 parallel) rear panel |
| USB | Front panel |
| Local Enable/Disable | Switch front panel Two-pole connector rear panel |


Block diagram

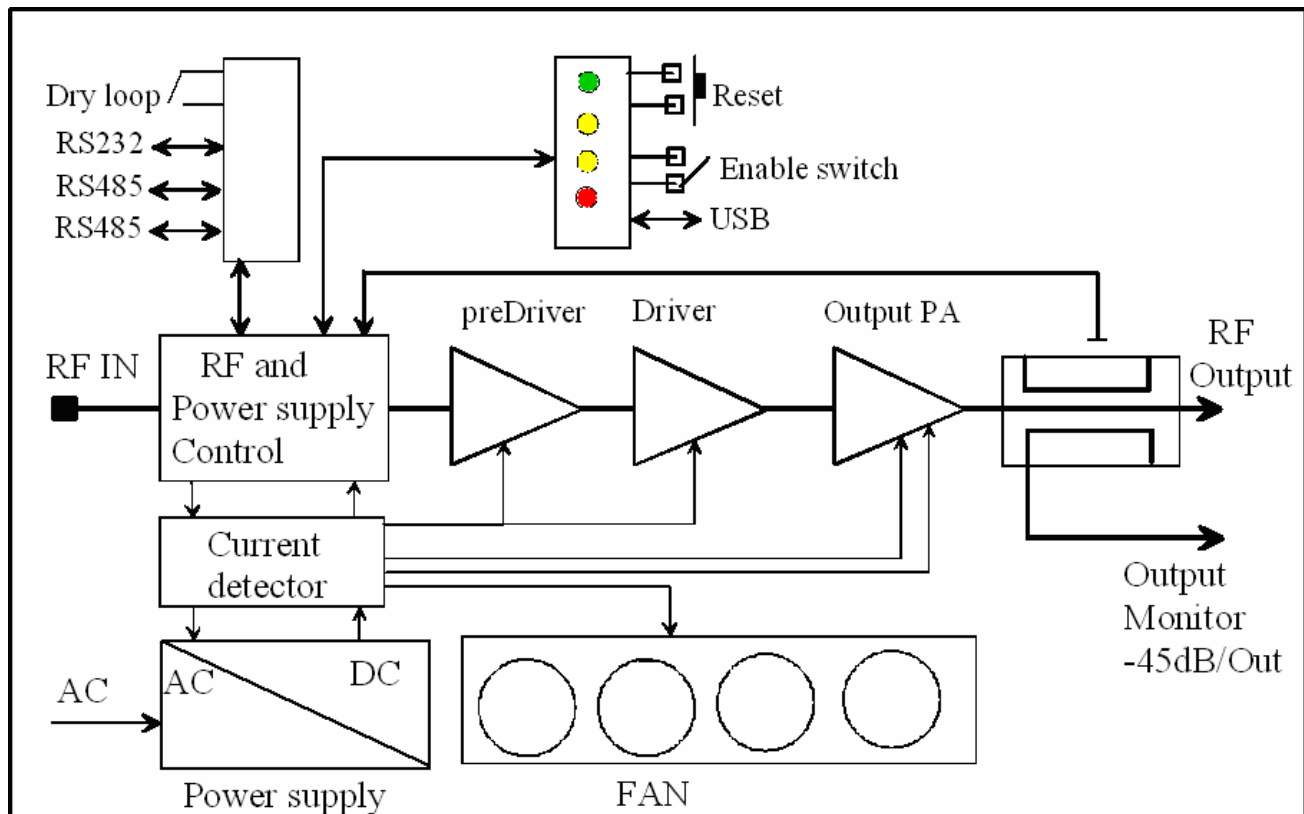

Top View

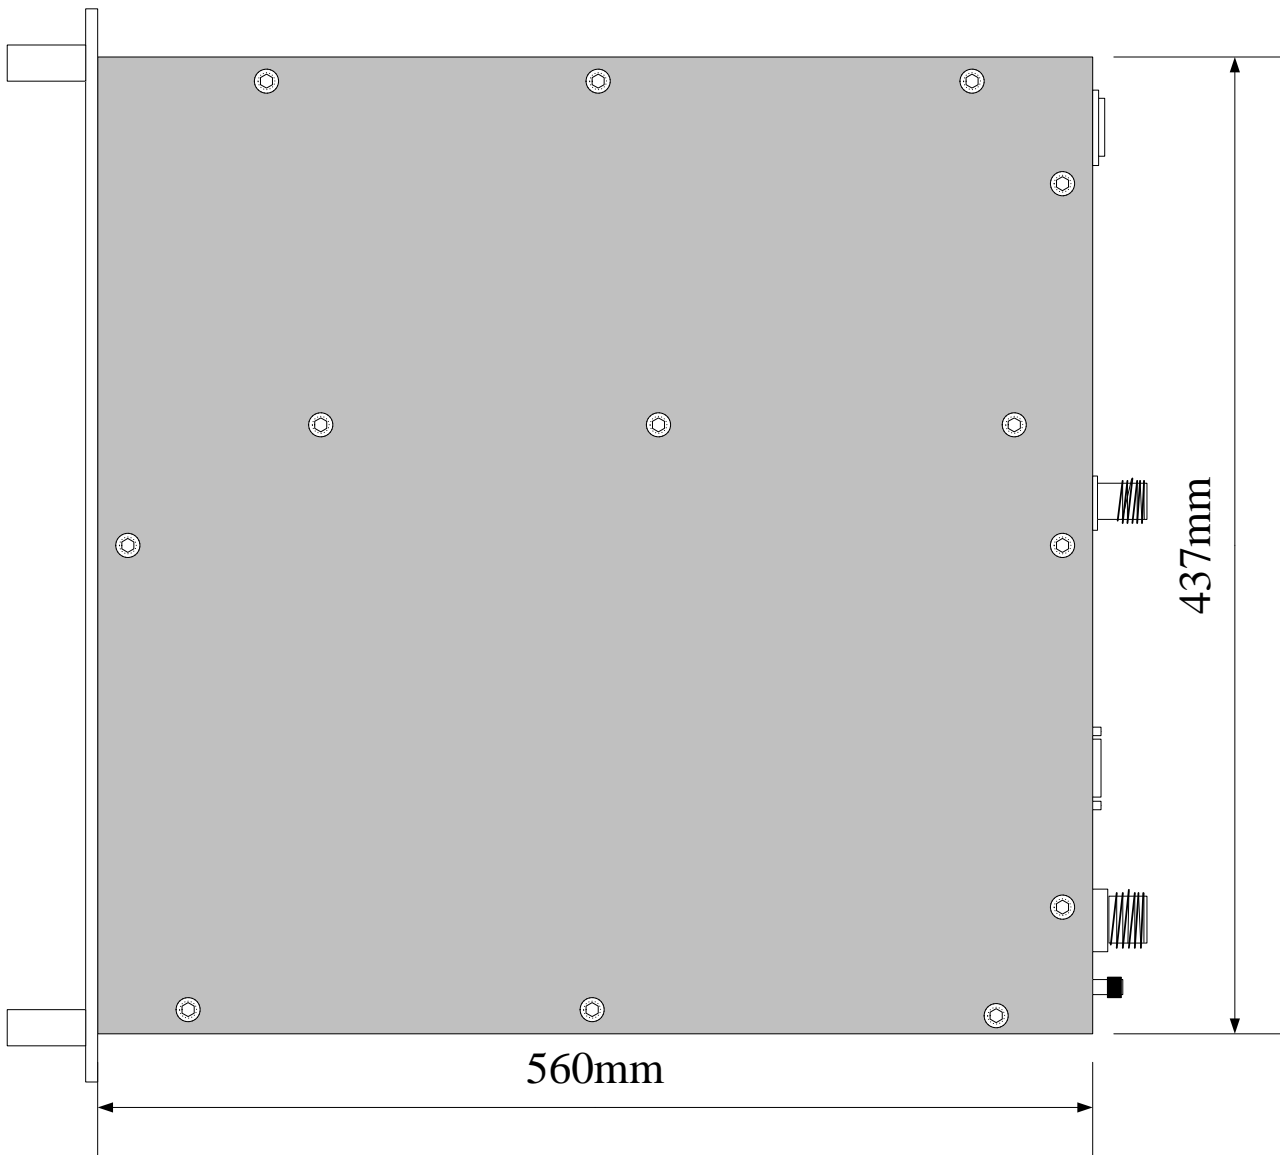


Front Panel


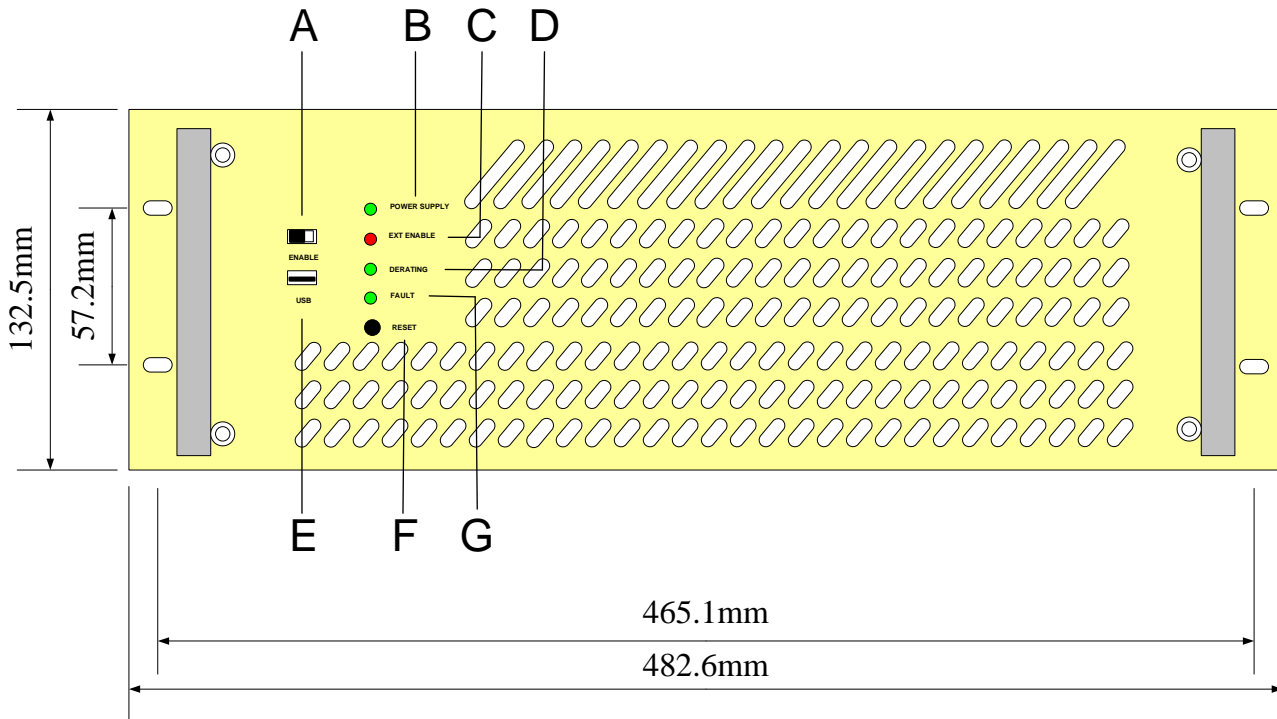


| | Interface | Description |
|---|-------------------------|--|
| A | Enable Switch | Switch at the left side, it means Disable; Switch at the right side, it means Enable. The default status is Disable. |
| B | LED Power Supply | If LED is green, it means power supply is OK; If LED is off, there is power supply failure. |
| C | LED Ext Enable | If LED is on, it means Enable; If off, it means disable. |
| D | LED derating | Output power is too low, though PA still works |
| E | USB | Serial interface USB |
| F | Reset | To reset PA |
| G | LED Fault | Serious problems with PA |

Rear Panel

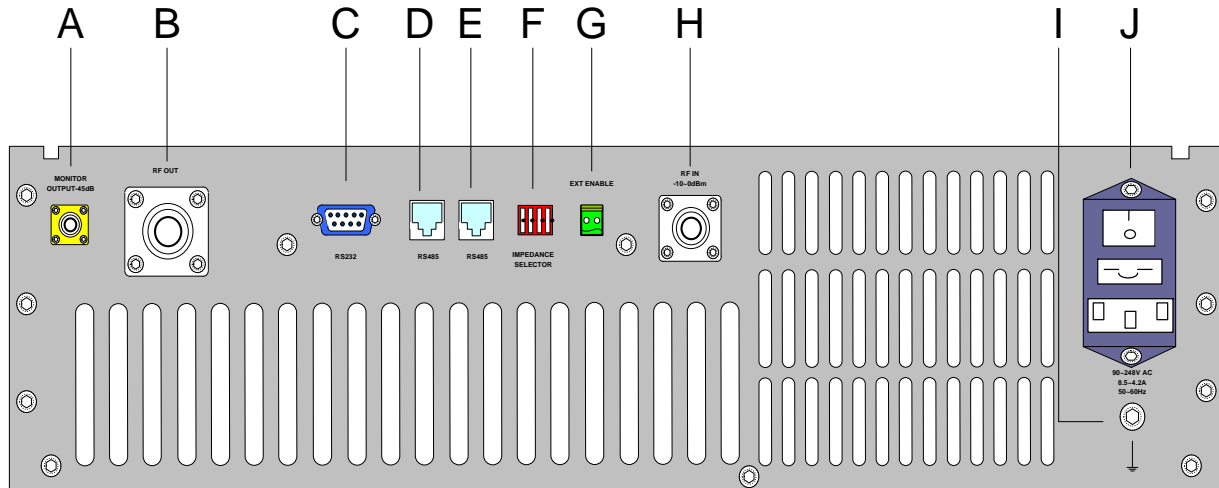

| | Interface | Description |
|---|--------------------|--|
| A | RF Monitor | The calculation is as follows: $P_{out} - 45dB = \text{RF Monitor } P_{out}$ |
| B | RF Out | RF Output |
| C | RS232 | Serial interface RS232 |
| D | RS485 | Serial interface RS485 |
| E | RS485 | Serial interface RS485 |
| F | Impedance selector | This interface is used to select the proper impedance. There are altogether 4 switches each marked with a number. If the switch is put up, it means ON; if down, it means OFF. PA offers 3 options in impedance selection: |
| | 1 | OFF OFF OFF OFF Default |
| | 2 | ON OFF ON OFF 470 R |
| | 3 | OFF ON OFF ON 120 R |
| G | EXT Enable | If Enable Switch (in the front panel) is off: EXT Enable does not work; If Enable Switch is on: PA works with EXT Enable connected; PA automatically power off if EXT Enable is disconnected. |
| H | RF In | RF input |
| I | Ground | Ground connection |
| J | AC Input | AC |

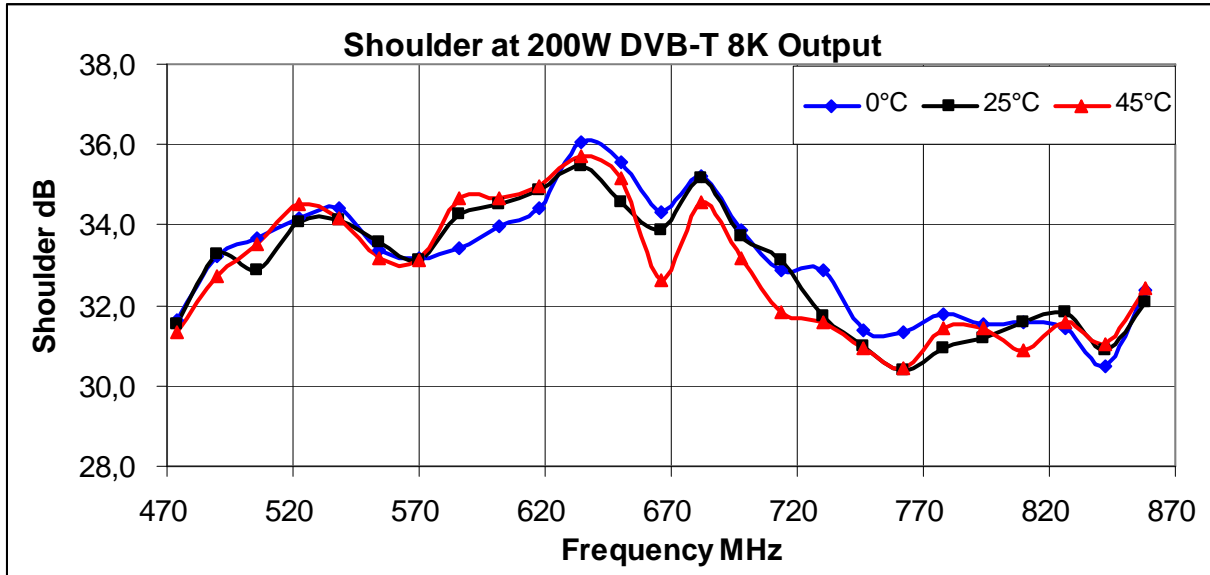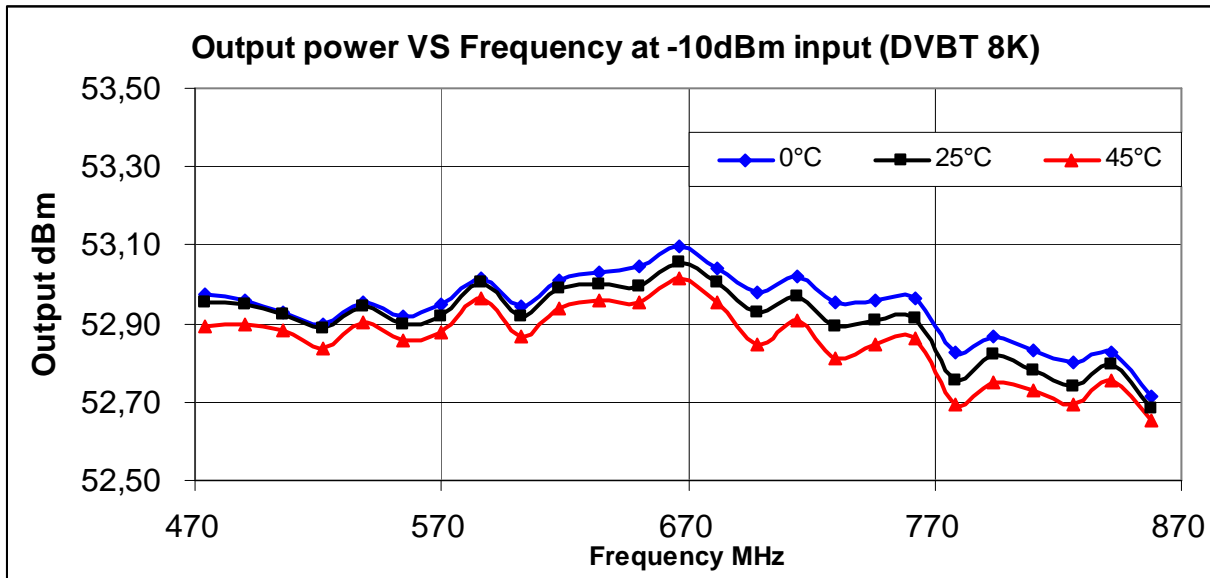



200W DIGITAL TV UHF RF POWER AMPLIFIER

05/08/2008 V1.1

www.pacificwave-wireless.com

